




Sprint Fuel Pressure Gauge

OPERATING INSTRUCTIONS

Fuel pressure indicator gauge allows pre-adjustment of the high speed, secondary and main valve opening pressures using a compressed air source. Gauge can be mounted directly to the wall or tool box.

1. Close shut off valve on fixture.
2. Connect regulator to a compressed air source with a psi charge that is greater than the desired setting for the fuel bypass valve being checked.
3. Connect the fuel bypass valve inlet to the fixture.
4. Open shut off valve.
5. Turn regulator adjuster knob clockwise slowly increasing pressure until valve releases.
6. The reading on the gauge is the valve release pressure.
7. Close shut off valve on fixture.
8. Adjust valve to desired setting as needed and repeat steps 4 thru 7.
9. When testing is completed, turn regulator adjuster knob counter clockwise to release pressure.

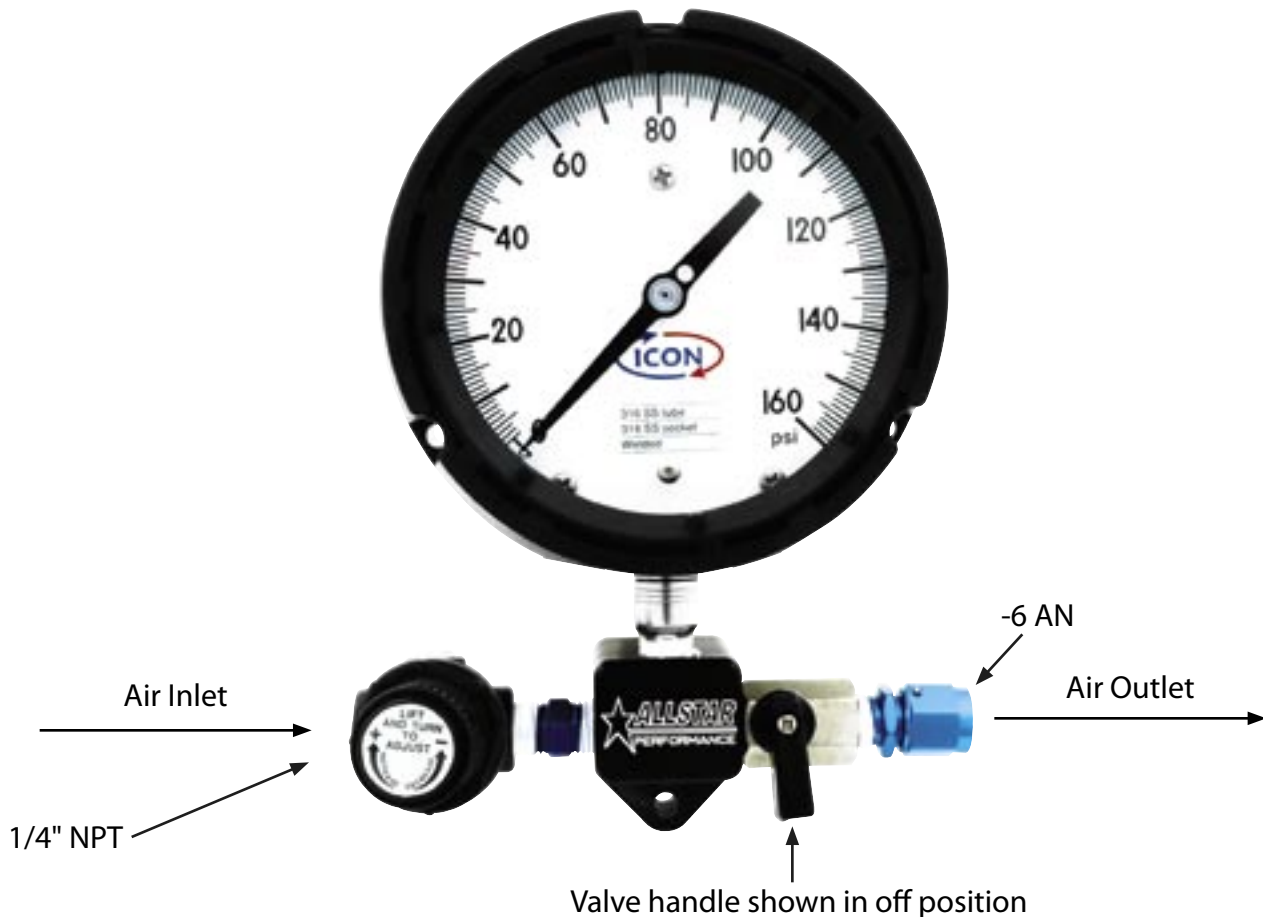

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com