



# Sway Bar Adjuster

## INSTALLATION INSTRUCTIONS

### TO INSTALL:

1. Remove existing hardware and frame bushings if applicable.

2. Remove square drive adapter from eye bolt assembly by loosening the two set screws and unthreading the square drive adapter.

3. Unthread the frame bushing from the eye bolt assembly. **DO NOT REMOVE THE SCREW IN THE EYE RING.**

4. Mark the location for the adjuster on the frame rail and drill two 1-1/4" holes in the frame rail to insert frame bushing.


5. Insert frame bushing (with locking collar on top) from the top so that it protrudes 1/4" through the bottom of the frame rail.

6. Weld frame bushing to the top and bottom of the frame. **DO NOT WELD LOCKING COLLAR TO THE FRAME.**

7. Re-install the eye bolt into the frame bushing from the bottom up.

8. Re-install square drive adapter onto the eye bolt assembly by threading the adapter onto the bolt all the way, then back off to align one of the set screws with the flat on the eye bolt. Apply blue threadlocker to both set screws and tighten.

9. Tighten bolt on locking collar to prevent bolt from turning.

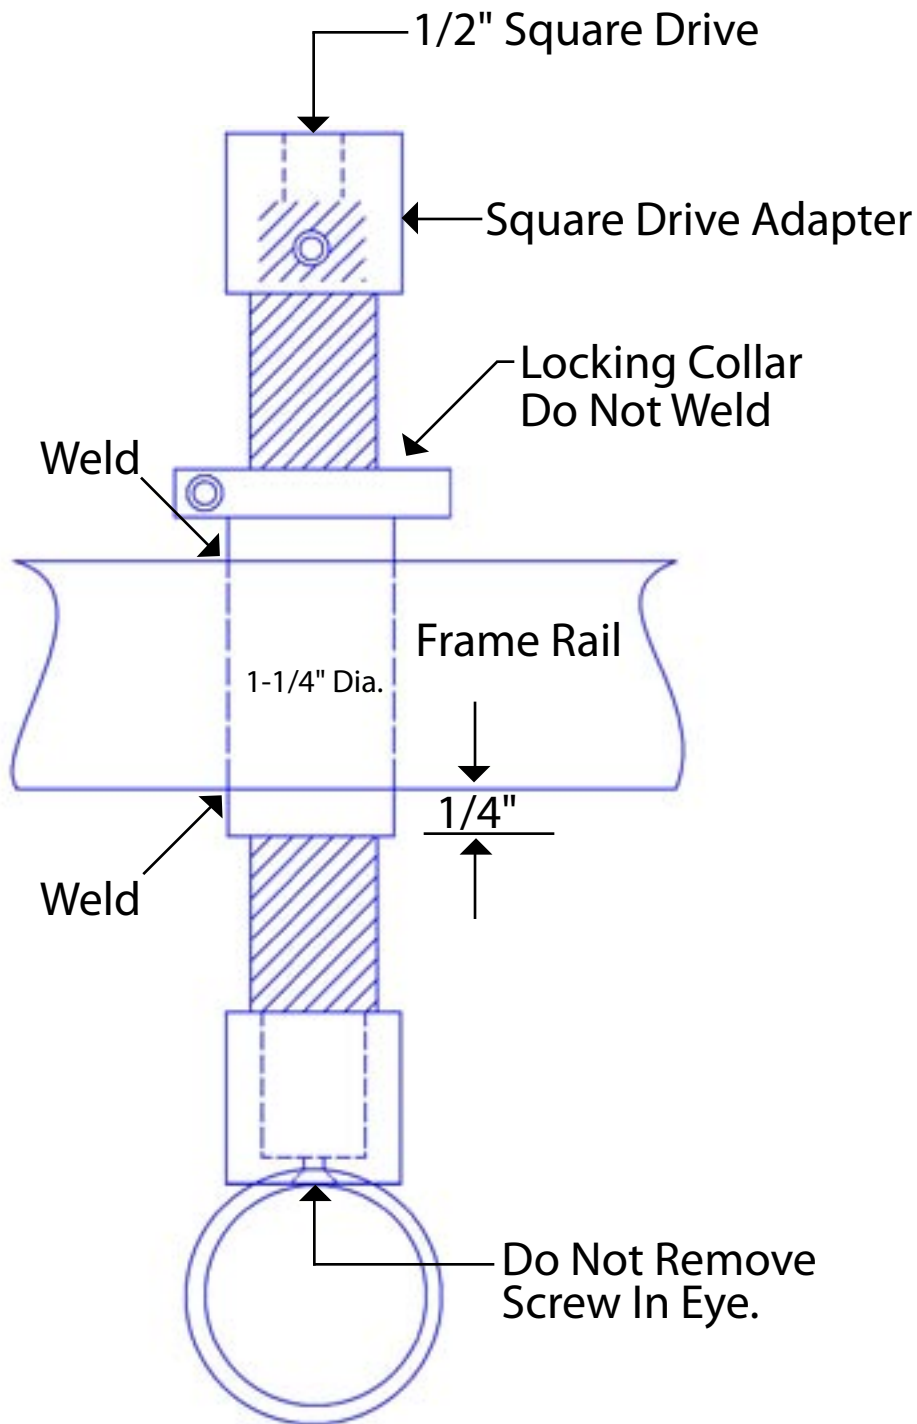

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098**

**Phone: (269) 463-8000 Fax: (800) 772-2618 [www.allstarperformance.com](http://www.allstarperformance.com)**